



CH-BTB

SOLID WOOD DOOR
CONNECTION HARDWARE
INSTALLATION

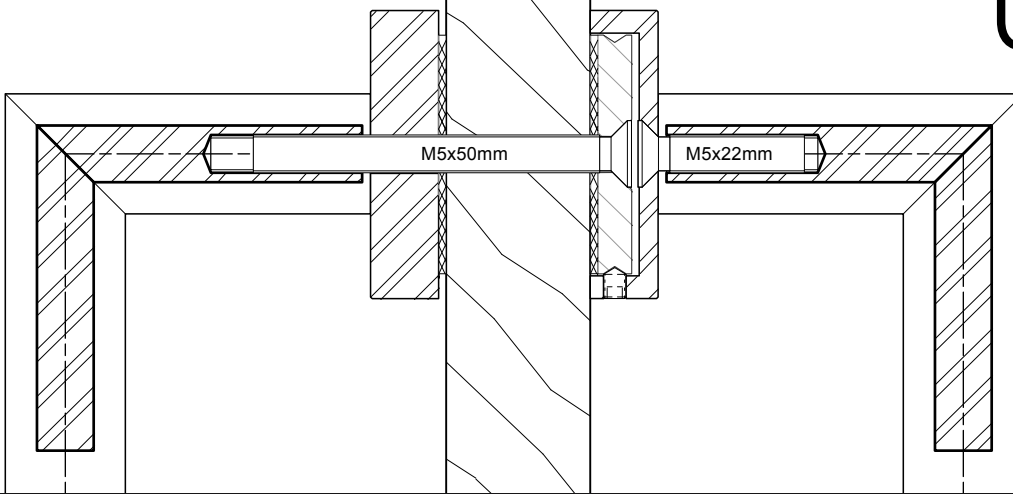

Ø 6mm [1/4"] HOLE

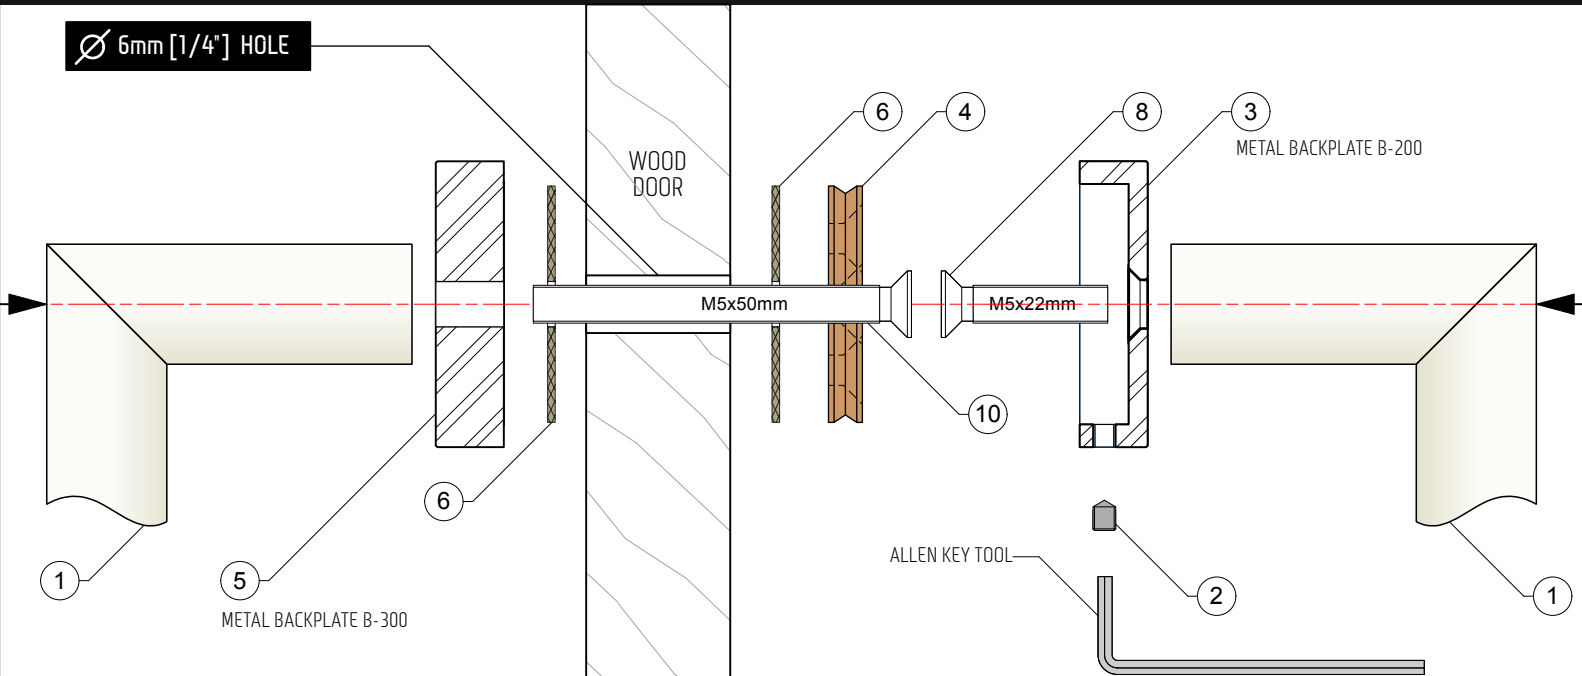

1		JWL WOOD HANDLE - VARIED LENGTHS, PROFILES AND FINISHES
2		HANDLE SET SCREW - TIGHTEN WITH ALLEN KEY TOOL - PROVIDED
3		METAL BACKPLATE B-200
4		BRASS MOUNTING PLATE
5		METAL BACKPLATE B-300
6		BLACK RUBBER GASKET x 2
7		CLEAR PVC LINER FOR M5 SCREW
8		M 5 SCREW - 22mm - TIGHTEN WITH PHILIPS SCREWDRIVER
9		M5 SCREW - 40mm - TIGHTEN WITH PHILIPS SCREWDRIVER
10		M5 SCREW - 50mm - TIGHTEN WITH PHILIPS SCREWDRIVER

JWL


PULL
LIFE
OPEN

INSTALLATION DETAILS:


- Backplates are required for all Back-to-Back installation.
- Allen Key tool for set screw installation included.
- Hardware included for doors 35mm [1 3/8"] to 57mm [2 1/4"] thick.
- For more details visit: www.jwlhome.com

CH-BTB

GLASS DOOR
CONNECTION HARDWARE
INSTALLATION

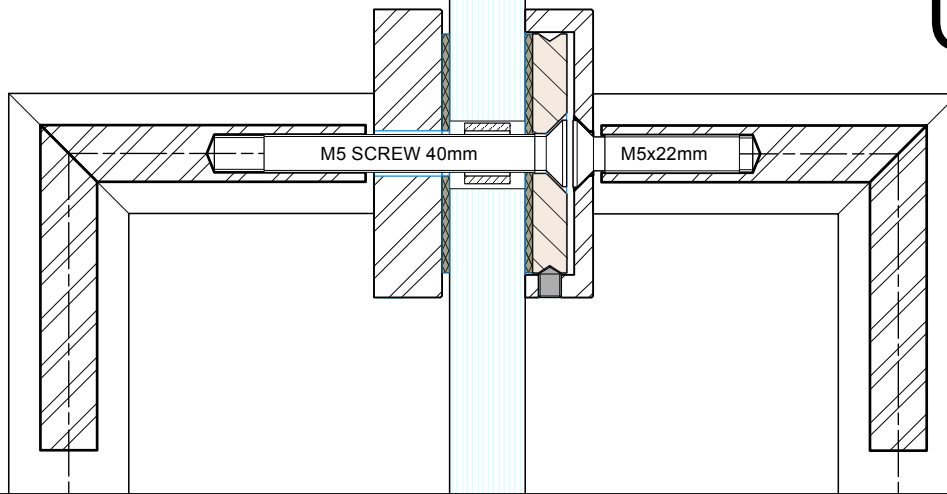

Ø 10mm [3/8"] HOLE

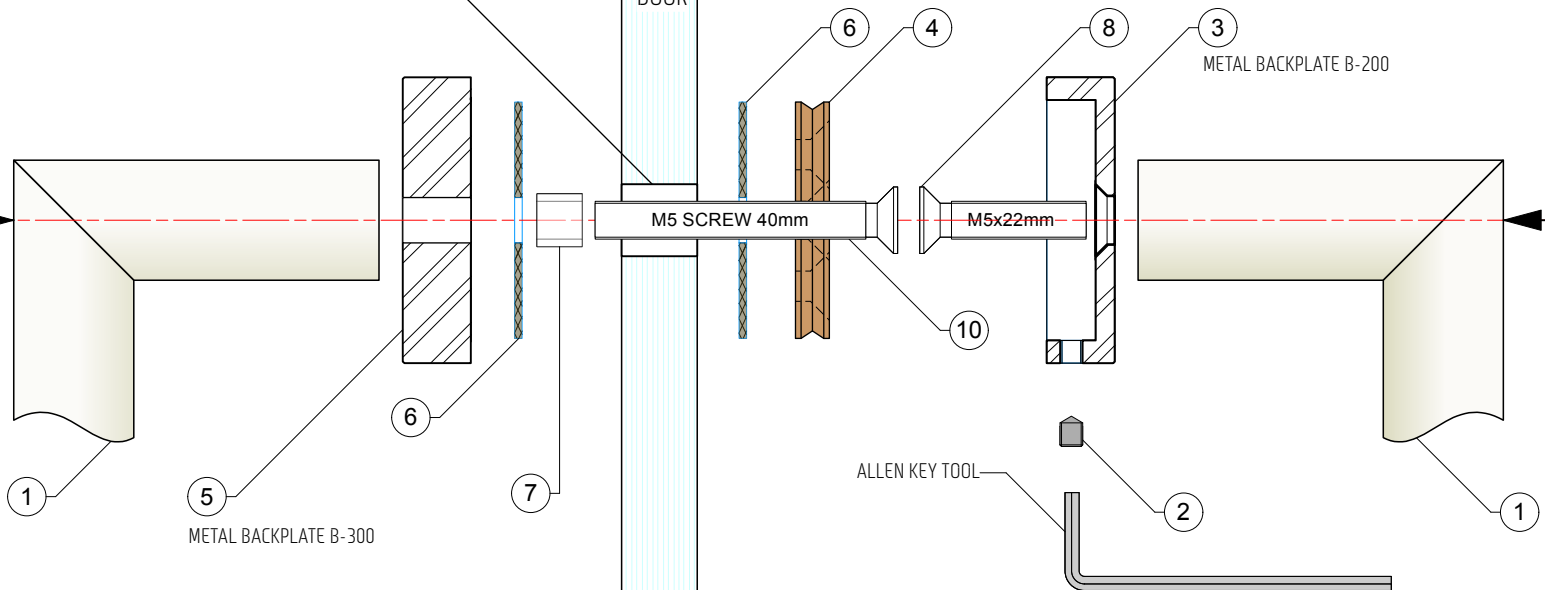

1		JWL WOOD HANDLE - VARIED LENGTHS, PROFILES AND FINISHES
2		HANDLE SET SCREW - TIGHTEN WITH ALLEN KEY TOOL - PROVIDED
3		METAL BACKPLATE B-200
4		BRASS MOUNTING PLATE
5		METAL BACKPLATE B-300
6		BLACK RUBBER GASKET x 2
7		CLEAR PVC LINER FOR M5 SCREW
8		M 5 SCREW - 22mm - TIGHTEN WITH PHILIPS SCREWDRIVER
9		M5 SCREW - 40mm - TIGHTEN WITH PHILIPS SCREWDRIVER
10		M5 SCREW - 50mm - TIGHTEN WITH PHILIPS SCREWDRIVER

JWL

PULL
LIFE
OPEN

INSTALLATION DETAILS:

- Backplates are required for all Back-to-Back installation.
- Allen Key tool for set screw installation included.
- Hardware included for doors 35mm [1 3/8"] to 57mm [2 1/4"] thick.
- For more details visit: www.jwlhome.com