




# CH-CS

SOLID WOOD DOOR  
CONNECTION HARDWARE  
INSTALLATION

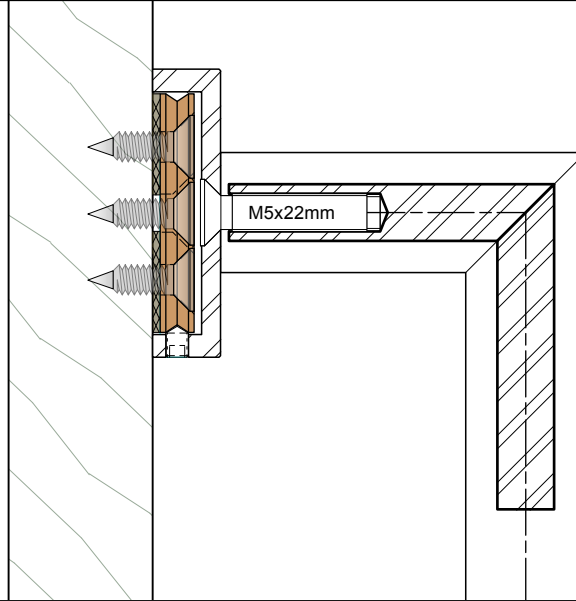

WOOD  
DOOR

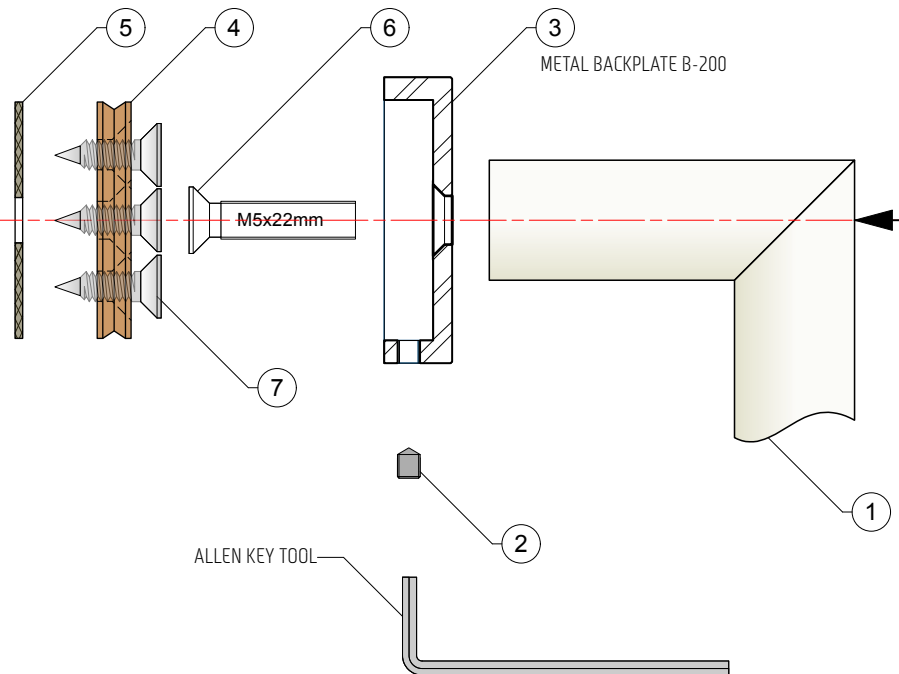

|   |                                                                                     |                                                           |
|---|-------------------------------------------------------------------------------------|-----------------------------------------------------------|
| 1 |  | JWL WOOD HANDLE - VARIED LENGTHS, PROFILES AND FINISHES   |
| 2 |  | HANDLE SET SCREW - TIGHTEN WITH ALLEN KEY TOOL - PROVIDED |
| 3 |  | METAL BACKPLATE B-200                                     |
| 4 |  | BRASS MOUNTING PLATE                                      |
| 5 |  | BLACK RUBBER GASKET                                       |
| 6 |  | M 5 SCREW - 22mm - TIGHTEN WITH PHILIPS SCREWDRIVER       |
| 7 |  | WOOD SCREW x 4 - TIGHTEN WITH PHILIPS SCREWDRIVER         |

JWL

PULL  
LIFE  
OPEN

## INSTALLATION DETAILS:

- Backplates are required for all Back-to-Back installation.
- Allen Key tool for set screw installation included.
- Hardware included for doors 35mm [1 3/8"] to 57mm [2 1/4"] thick.
- For more details visit: [www.jwlhome.com](http://www.jwlhome.com)